Support team India



Drawing a leg with Dimension less than Minimum

- When a bar is detailed, RebarCAD does not allow the user to draw a bar leg with a value • less than the minimum dimension. This minimum dimension is defined based on minimum length required to bend a bar.
- The below setting can be used if the user wishes to draw a bar with a leg dimension • lesser than the minimum dimension.



1. Go to RebarCAD > Configuration Centre > Global Configuration.

2. Select Bars





Support team India

CADS Global Configuration Centre	x
DEFAULT	-
DEFAULT CONFIG SOFTMETRIC DIMENSIONEXCLUSION	Î
BARS SPECIALBARS LABEL TICKSTAGS OUTLINES GROUPLAYERING RCLIBRARY SECTIONMARKERS RCLEADER BARREFS RANGE MISCELLANEOUS ABOUTBOX LAYERALIASMANAGER MEMORYSAVERS COUPLERS COU	Ш
OVERSTOCKLENGTH TOLERANCES OVERRIDINGBARRADII PROJECTSETTINGS ACCESSORIESLISTCONFIG	•

3. Select **DIMENSIONMINIMUMS**. The default value will be set to **Yes.**

CADS Global Configuration Centre	×
BARS	•
OVERSIZEENDSFACT INVAILDBARCOLOR AUTOLEADERBARS SHOWTYPE2AS17 USEFASTBBD SHOWSLIDEERROR STARTBARPOS STRETCHCHANGESMARK STRETCHASKSFORMARK MAXLENGTHWARNING ALWAYSDISPLAYLENGTHINCHES ZEROLENGTHINCHESTAT	
RADDINTOOUTER RADDINTOOUTER EXCLUDEBARSHAPES STRGHTBARMARK SCHEDRADIALBARASSTRAIGHT RADIALMAXHEIGHT SHOWSTRAIGHTDIM MAXDIMENSIONLENGTH MAXDEFAULTBARLENGTH DIMENSIONMINIMUMS UPDATEBARDIMENSIONS	E
ASKFORBMARKINPUT ALLOWDUPLICATECONTROLCODES	-
BARS DIMENSIONMINIMUMS	
Yes	
Assign to CFG	
OK Cancel Help	



Support team India



4. Please change it to No.

CADS Global Configuration Centre	J
BARS]
OVERSIZEENDSFACT INVAILDBARCOLOR AUTOLEADERBARS SHOWTYPE2AS17 USEFASTBBD SHOWSLIDEERROR STARTBARPOS	
STRETCHCHANGESMARK STRETCHASKSFORMARK MAXLENGTHWARNING ALWAYSDISPLAYLENGTHINCHES ZEROLENGTHINCHESTXT RADDIMTOOUTER EXCLUDEBARSHAPES STRGHTBARMARK	
SCHEDRADIALBARASSTRAIGHT RADIALMAXHEIGHT SHOWSTRAIGHTDIM MAXDIMENSIONLENGTH MAXDEFAULTBARLENGTH DIMENSIONMINIMUMS UPDATEBARDIMENSIONS	
ASKFORBMARKINPUT ALLOWDUPLICATECONTROLCODES	
BARS DIMENSIONMINIMUMS	
Assign to CFG	
OK Cancel Help	

- 5. Click Assign to CFG
- 6. Click OK
- 7. Click Yes.



The user can now draw a bar with a leg value lesser than the minimum dimension.

